

# Design *X-line*

## BALUSTRADE

*Assembling PROCEDURE*



# System 850

---

1

Kit 50 x5 with sliding:

Rail clip



2

Kit 50 x5 with sliding:

Glass clip



3

Kit 50 x5 with sliding:

Glass Spider



New  
System

# System 850

---

Kit 50 x5 with sliding : Rail clip

## Step 1

Necessary Materials for the installation of kit 50 x 50 with sliding




# System 850

Kit 50 x5 with sliding: **Rail clip**

## Step 1

Disassemble the “gun head” by taking off the two screws M6x14 DIN 7991, leave the upper side on the sliding lamas open.

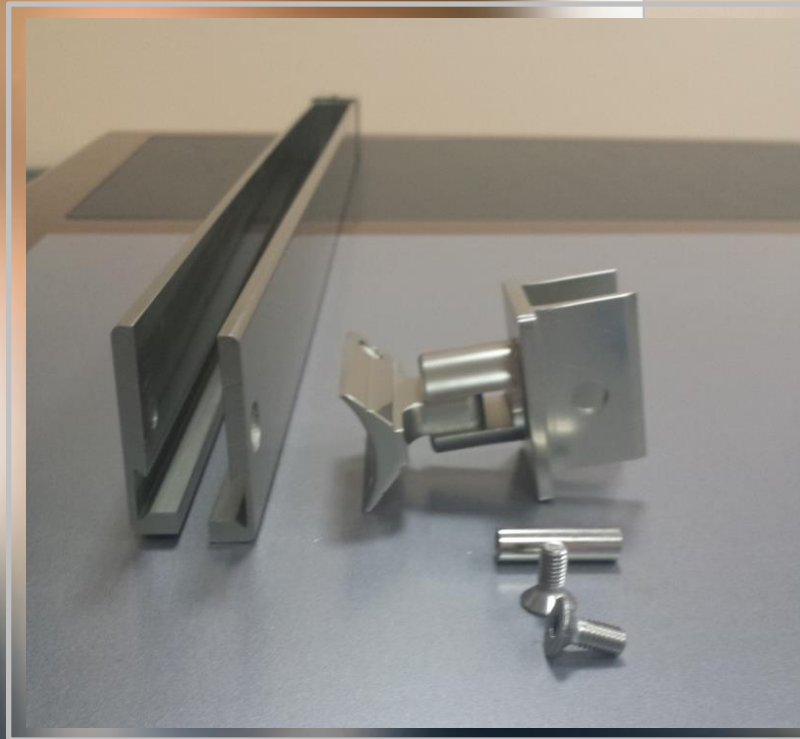




# System 850

---

Kit 50 x5 with sliding: **Rail clip**

## Step 2

The accessories Code Nr. 10/52 are inserted in the sliding lama (as many as needed)

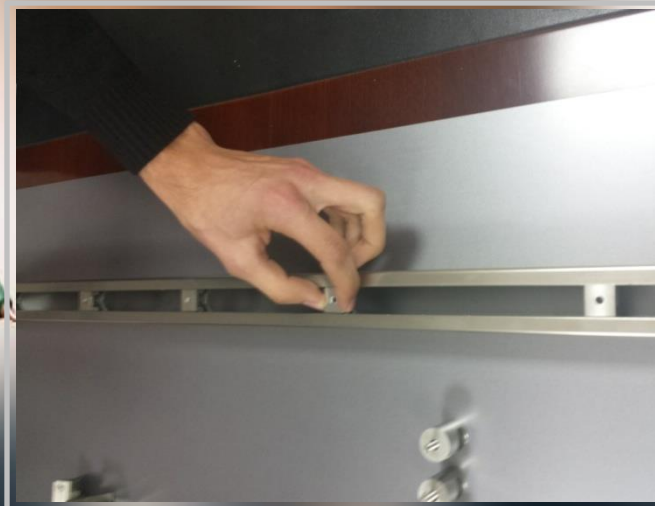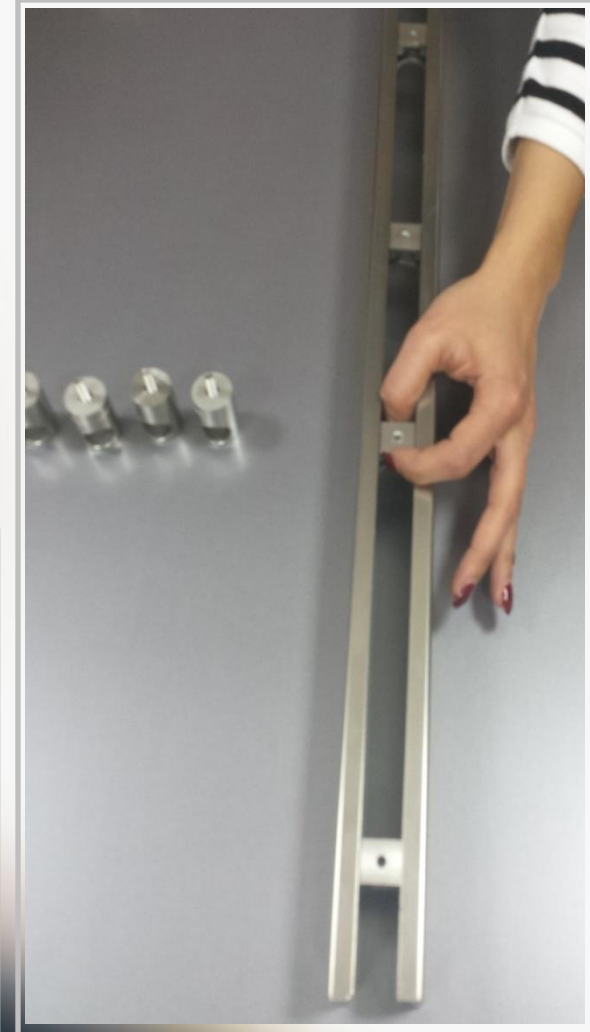
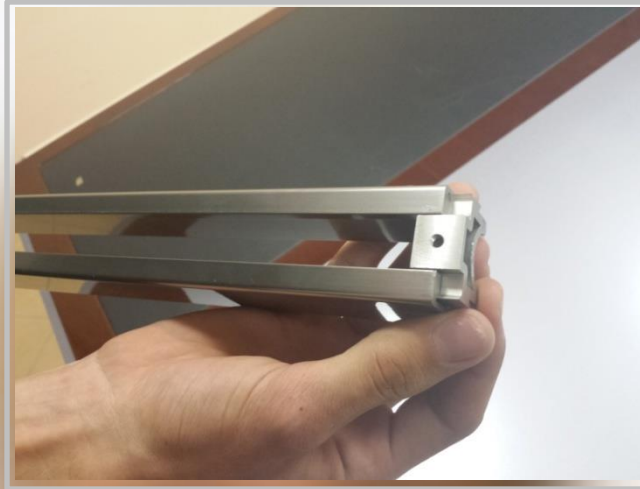


# System 850

Kit 50 x5 with sliding: **Rail clip**

## Step 3

The accessories Code Nr. 10/52 are divided on the high of the kit in equal space by each other and these accessories are being fixed at the frontal part of the accessories Code Nr. 97/01 + 97/03 using screw M5x20, DIN 7991. Afterwards it is fixed the second part with screws M5x 8 , DIN 916.

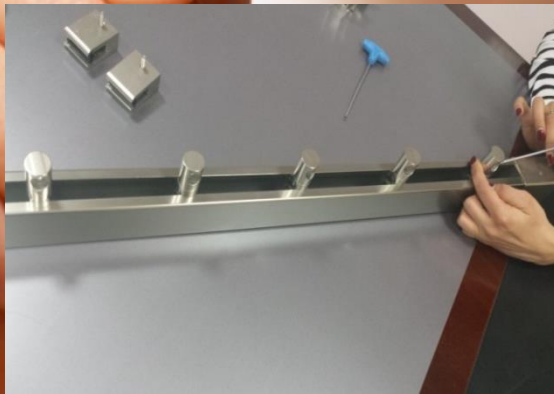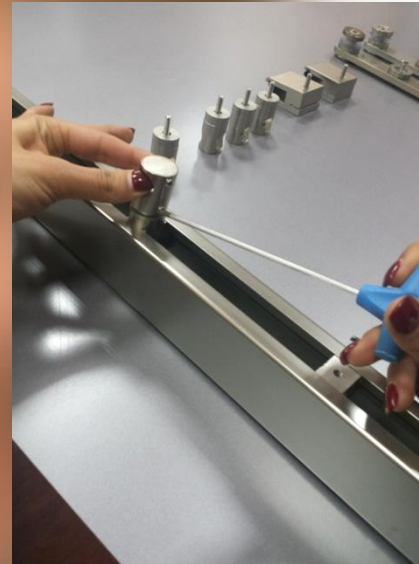


# System 850

---

Kit 50 x5 with sliding: **Rail clip**

**Final Product**

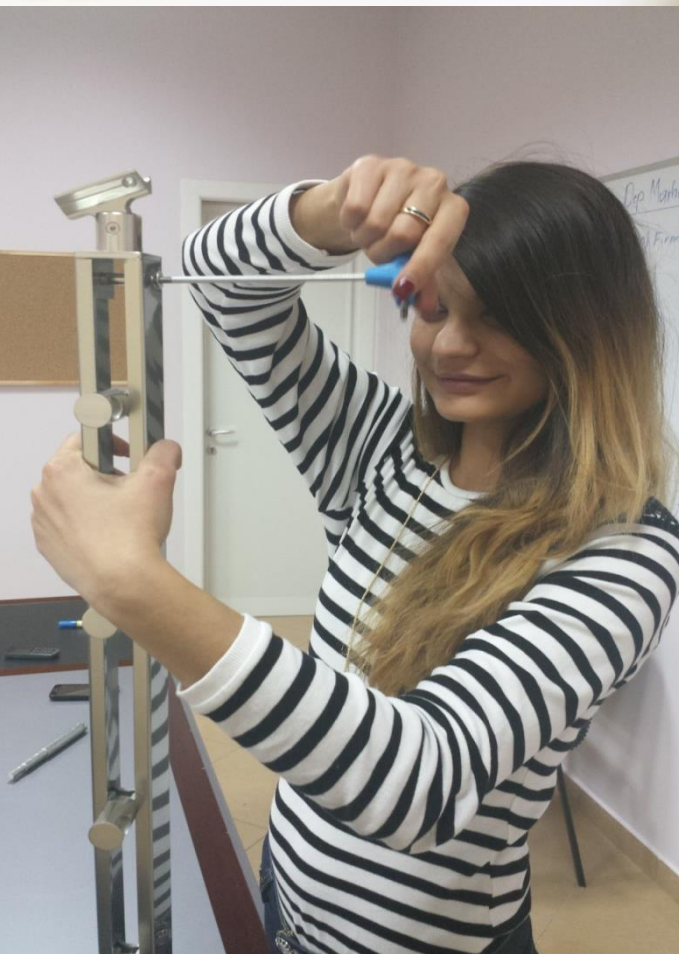

# System 850

---

# 2

Kit 50 x5 with sliding: **Glass clip**

## Step 1

Disassemble the “gun head” by taking off the two screws M6x14 DIN 7991, leave the upper side on the sliding lamas open.





# System 850


---

# 2

Kit 50 x5 with sliding: **Glass clip**

## Step 2

The accessories Code Nr. 10/52 are inserted in the sliding lama ( as many as needed)

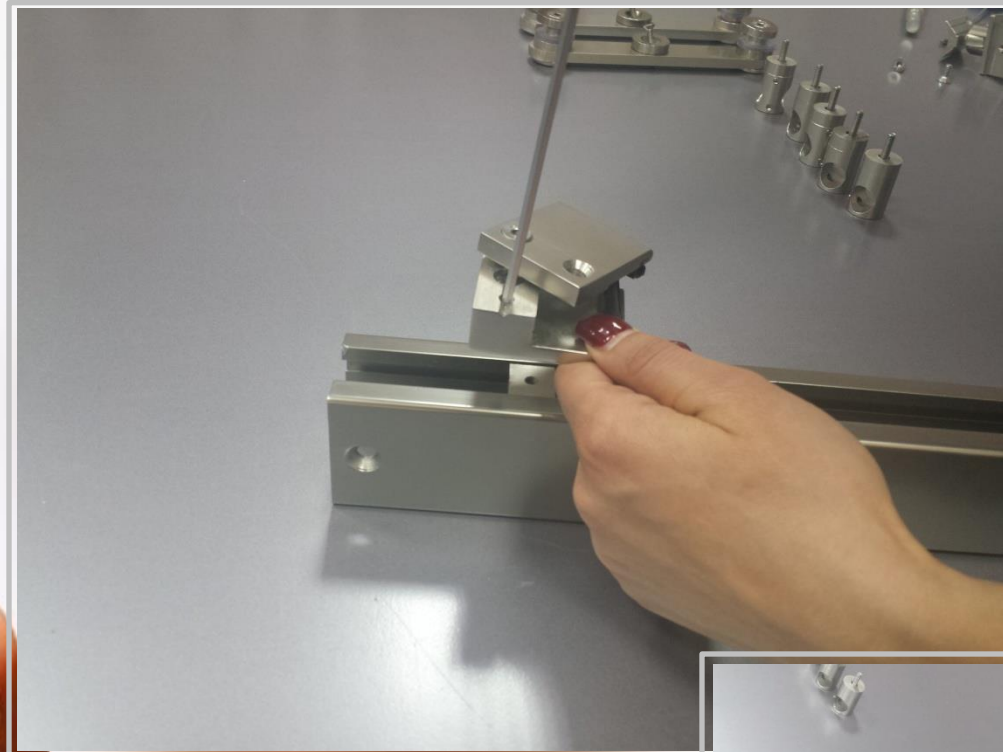

# System 850

---

# 2

Kit 50 x5 with sliding : **Glass clip**

## Step 3

The accessories Code Nr. 10/52 are placed in two points (hights) where the glass clips are being fixed Code Nr. 10/52



# System 850

---

# 3

Kit 50 x5 with sliding: **Glass Spider/H**

## Step 1

Necessary Materials for the installation of kit 50 x 50 with sliding glass spider




# System 850

3 Kit 50 x5 with sliding : **Glass Spider/H**

## Step 1

Disassemble the “gun head” by taking off the two screws M6x14 DIN 7991, leave the upper side on the sliding lamas open

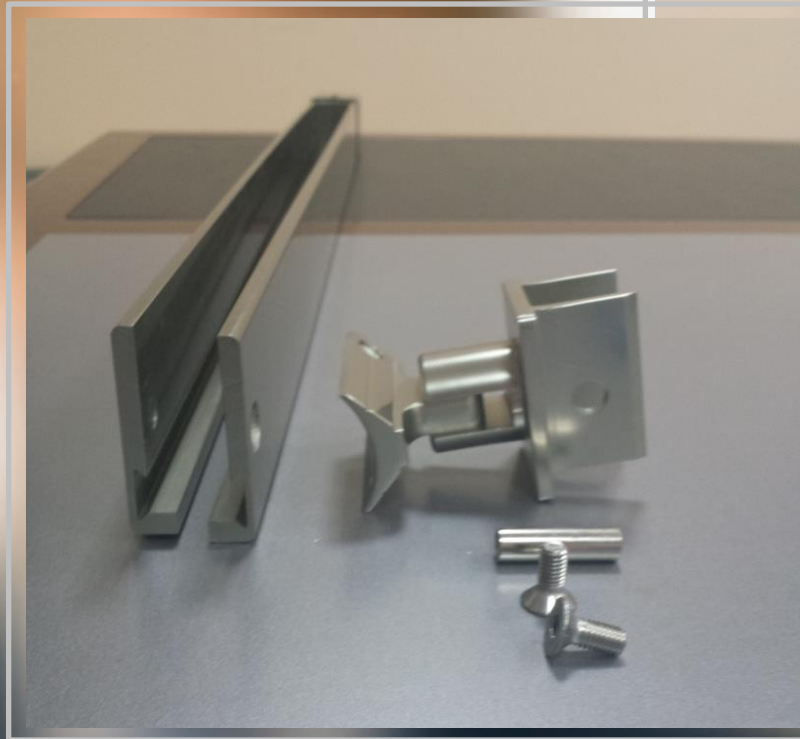



# System 850

---

# 3

Kit 50 x5 with sliding: **Glass Spider/H**

Step 2

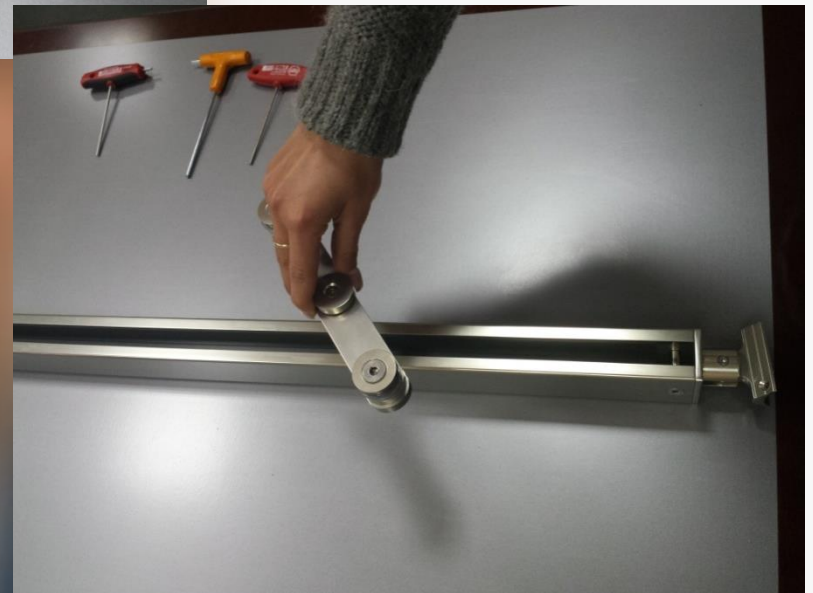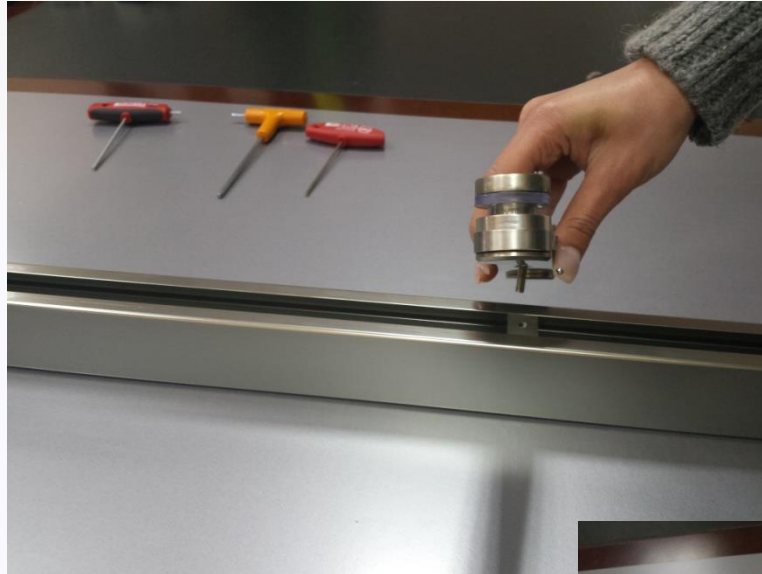

# System 850

---

# 3

Kit 50 x5 with sliding: **Glass Spider/H**

## Step 3

